DOUGHTY

User Manual

www.doughty-engineering.co.uk

T57203/04

Doughty Hanging Clamp with Pink Eye

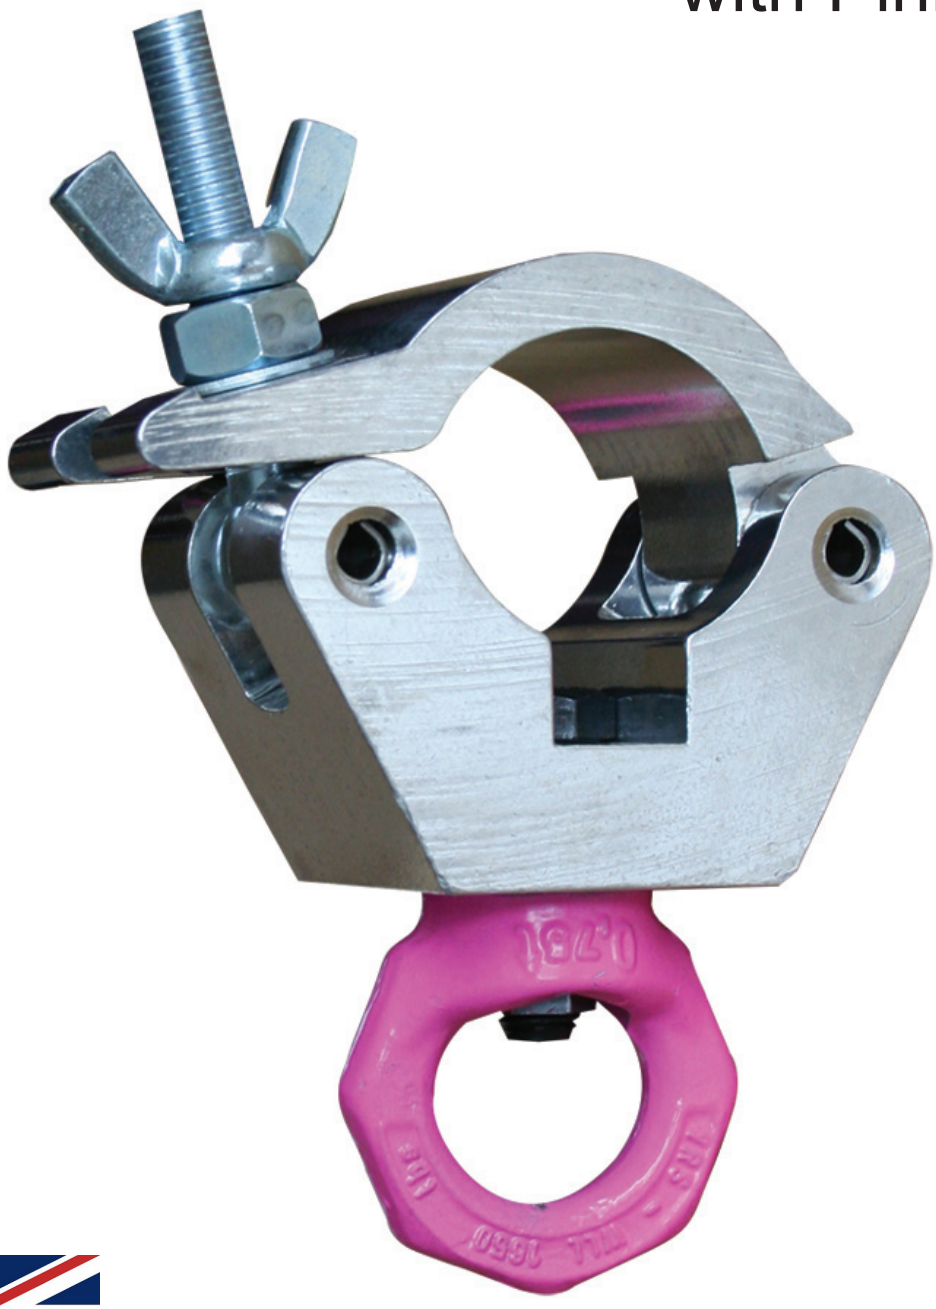

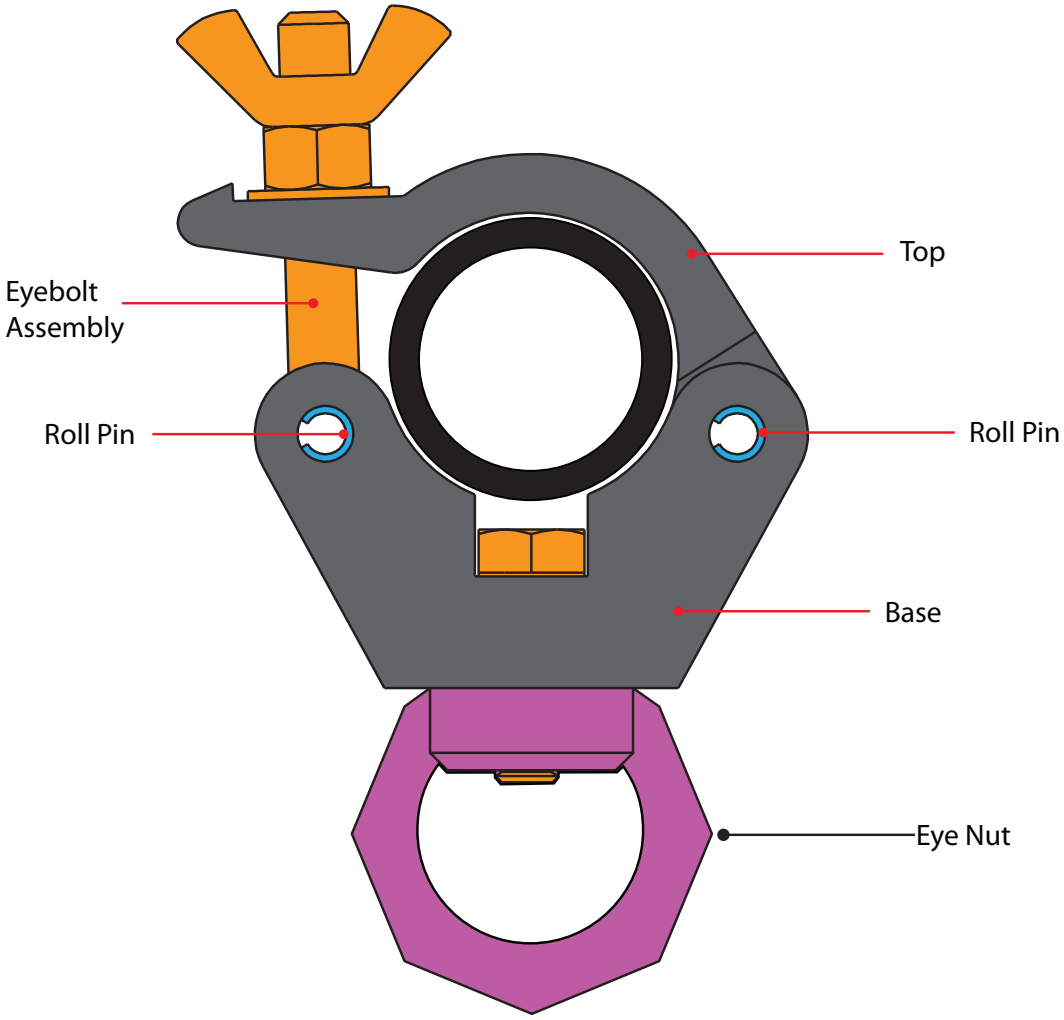
Top
Eyebolt
Assembly
Roll Pin
Roll Pin
Base
Eye Nut

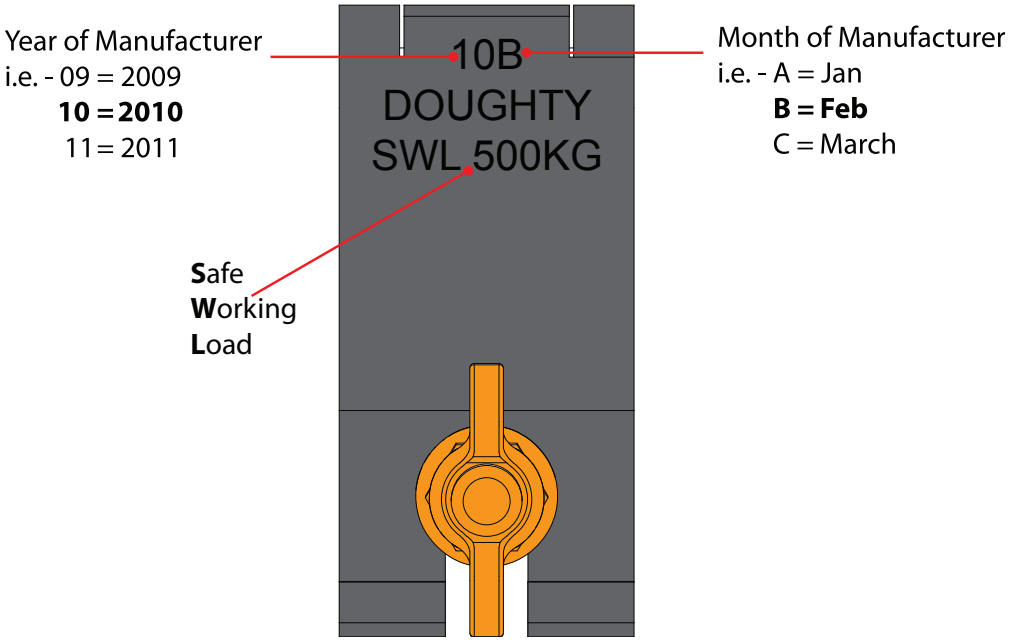
Year of Manufacturer
i.e. - 09 = 2009
10 = 2010
11 = 2011
10B
DOUGHTY
SWL 500KG
Month of Manufacturer
i.e. - A = Jan
B = Feb
C = March
Safe
Working
Load

1. Never exceed the Safe Working Load (SWL) shown on the clamp.
2. Only use the clamp within the designed tube parameters (48-51mm)
3. All clamps should be visually inspected before use. In the event of any damage the clamp should be taken out of service and returned to an ‘Approved Doughty Service Agent’ for inspection. (see our dealer locator on our web site for a comprehensive list of Authorised Service Agents)
4. When used in conjunction with other accessories, care must be taken to ensure that the minimum SWL of any component is not exceeded.
5. Doughty Engineering Ltd does not recommend using any clamps which do not fully encompass the tube for overhanging. All open clamps including hookclamps should be used in a vertical orientation only.

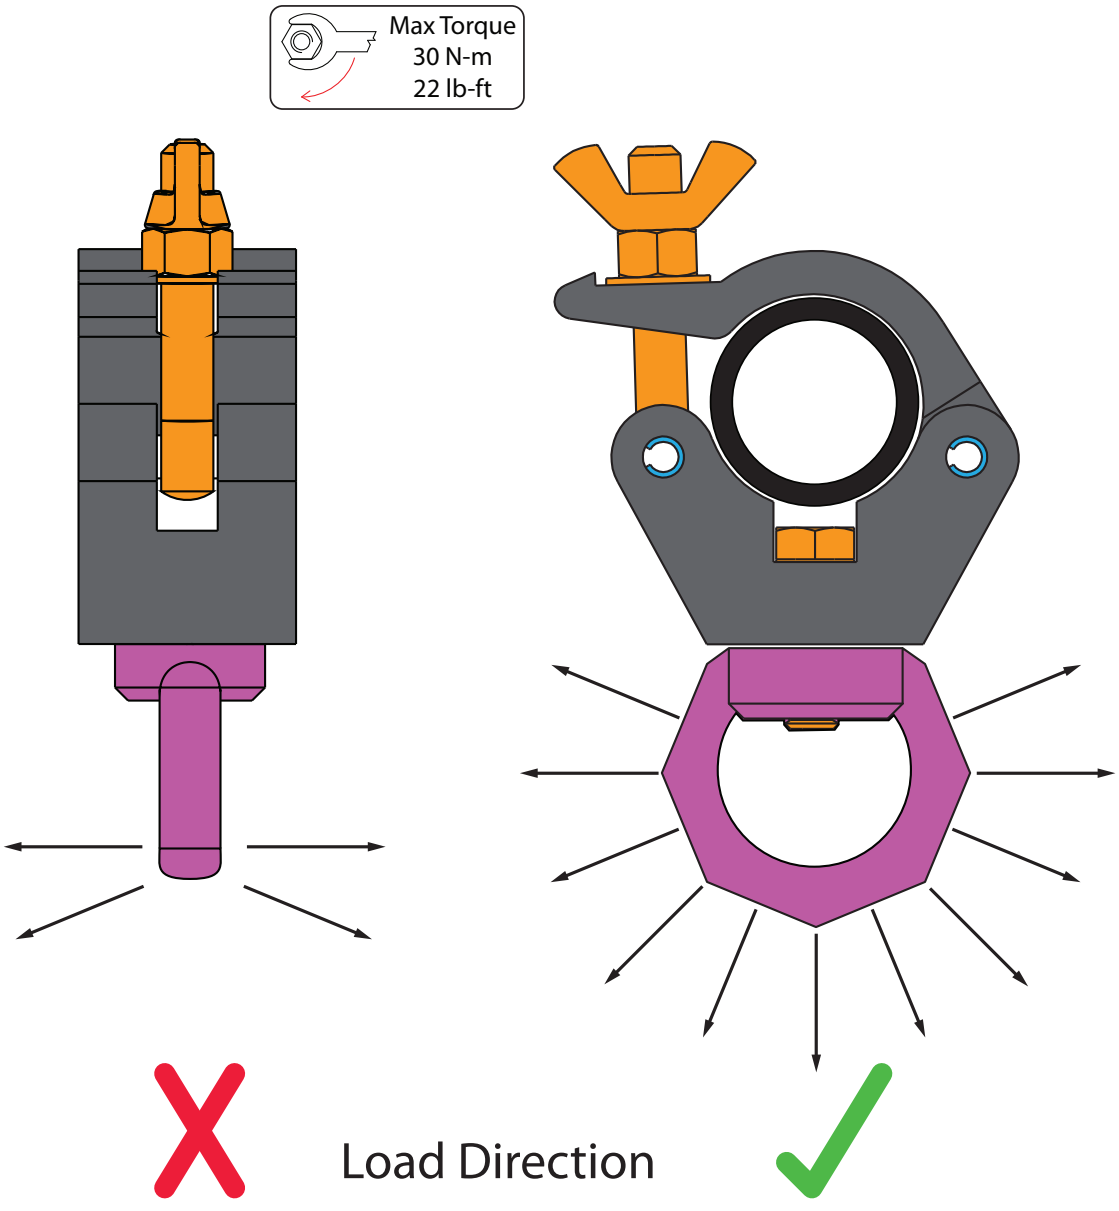

Doughty Engineering Ltd
Crow Arch Lane
Ringwood, Hampshire, BH24 1NZ
Tel: +44 (0) 1425 478961 Fax: +44 (0) 1425 474481
email: sales@doughty-engineering.co.uk
Web: www.doughty-engineering.co.uk

Note: Whilst every effort has been made to ensure that the information contained within this manual is correct, Doughty Engineering does not accept any liability for errors or omissions. Specifications and technical data are intended for guidance purposes only and may vary.